

Camera Settings: If you want to use video and photo mode with Canon EOS cameras your must be use Video mode. This shutter can use any empty channel in your receiver. If possible we recommended 3 Position switch for full functionality. But you can use any channel (stick or 2 position switch)

Using shutter

FOR 3 POSITION SWITCH

Move switch to center position. Plug shutter to 3 position switch. Because center position is not any activity for shutter.



You can see below switch diagram

- 0: Take Photo (continuous every 1 second)
- 1: Stop all function (video and photo)
- 2: Video Start

For taking photo only one shot move stick position from 1 to 0 position after then 0 to 1 for stop taking photo. If stick stay in this position camera continue taking photos every 1 second.



For recording video move stick position from 1 to 2. and camera start video recording. If you want stay record stick must be stay in position 2. For stop record you only move stick to first position.

Shutter working with any channel end point adjustment (EPA, or Servo Travel) settings 0-50-100.

- 0- Take Photo
- 50 - Stop all function
- 100- Video Start

If you want to use reverse position switch you can reverse shutter channel from your radios.

FOR 2 POSITION SWITCH

If you want use with 2 position switch you can only one function operate. Only take photo or video function.

For use 2 position switch you must adjust end point settings of shutter channel. EPA setting must be 50-100 or 1-50.

